

Ultracure™ Damp proofing cream

Description

Ultracure is a unique silicone emulsion damp proofing cream for injection into mortar bed joints to form a chemical DPC.

Installed via a series of 12mm holes that are drilled into the mortar to a depth of 90% of the wall thickness, the cream is dispensed to fill the hole to within 1cm of the wall surface.

Curing starts immediately with the final cure taking 2 – 6 weeks depending on wall thickness.

- Modern rising damp treatment
- Proven silicone technology
- Economic consumption rates

Benefits

Ultracure injection cream is solvent free, ecologically safe and non-hazardous damp proofing system.

Ultracure is injected into mortar beds without the use of specialized high pressure equipment and is highly effective in the control of rising damp.

The damp proof course injection cream is typically dispensed through a nozzle using a caulking gun or hand-pump to deliver a rapid installation without smells or mess.


- Ecologically safe and non-hazardous
- No specialist equipment needed
- Fast, clean installation

Distinction

Ultracure is specially formulated without the use of thickening agents to produce 100% active damp proofing cream. The emulsified cream migrates rapidly into pores in the masonry to control capillary action and stop rising damp.

Ultracure has been independently tested and accredited by the British Board of Agreement

- 100% active DPC formulation
- Effective rising damp control
- BBA Approved - Certificate 02/3961

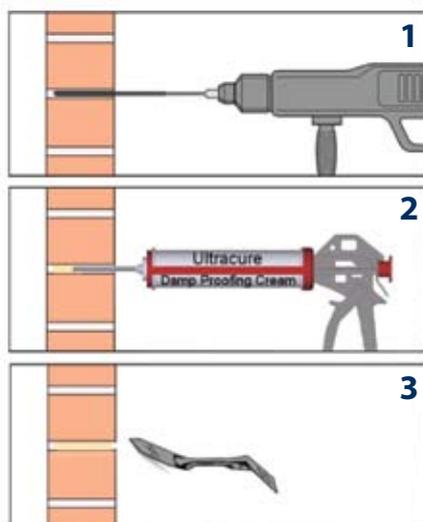

Consumption rates

| Wall Thickness | 115mm (4.5") | 230mm (9") | 345mm (13.5") |
|-------------------------|--------------|------------|---------------|
| Drilling Depth | 100mm | 210mm | 320mm |
| Cream per Metre of Wall | 90ml | 190ml | 290ml |
| Wall per Litre of Cream | 11.11mtrs | 5.26mtrs | 3.49mtrs |

Method statement

1. Drill 12mm diameter bores into a single mortar bed joint to a depth that is about 90% of the wall thickness (e.g.100mm for 115mm wall, 210mm for 230mm wall etc.)
2. Fill the bore with Ultracure damp proofing cream to within 10mm of the face of the wall, taking care to dispense the cream right to the back of the hole.
3. Make good external wall face with matching mastic or plug. On internal faces holes can be left open and covered with skirting boards.

NB Injection holes should be placed at the base of each perp-end joint along the line of the DPC and notwithstanding at horizontal centres that do not exceed 120mm.

External DPC's should be sited at least 150mm above ground level and where solid floors are present internally, close to floor level

View product videos on our website.

Product specification

- Product:** Ultracure DPC
- Material:** Silicone emulsion cream
- Packaging:** 380ml cartridge
1000ml cartridge
3000ml tub
5000ml injector pot
- BBA Approval:** Cert No 02/3961

BS6576: 1985 "Code of practice for installation of chemical damp-proof courses" requires all internal salt contaminated wall plaster to be replaced. New plaster must not bridge the DPC.

An integral waterproofing additive such as Brunopel IWP should form part of the re-plastering specification.

- Other good building practices include:
- Treat skirtings with Microtech Dual
 - Check cavity walls for blockages



Twistfix Ltd

6th Floor, 8 Exchange Quay, Manchester M5 3EJ
www.twistfix.co.uk
© Twistfix Ltd 2008 Doc DPC v0902